


Replacing the Chip on MiniTouch

- 1) Unplug the AC power to the MiniTouch Control Enclosure.
- 2) Remove the two Button Head Cap Screws along the lower edge of the MiniTouch Enclosure door so you can open the enclosure.
- 3) Open the door all the way so that the inside is facing up and you can see the MiniTouch Controller Board.
- 4) With you thumb and forefinger, remove the chip indicated by this arrow..



- 4) With your thumb and forefinger, remove the chip indicated by this arrow.
- 5) Place the new chip on the mount making sure to orient the new chip according to the notch at the top of the holder.
- 6) Make sure all the legs are aligned with the sockets in the holder and press the chip into the holder with your forefinger.

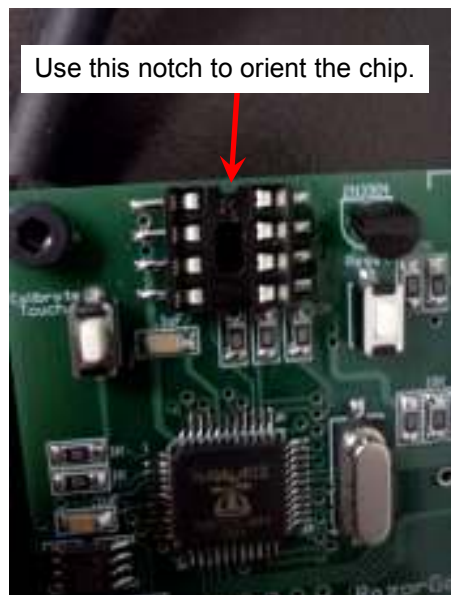

Make sure all the legs are aligned with the sockets in the holder and press the chip into the holder with your forefinger.

