

# Electrical Connections on MDrive RazorGages

## Tower Enclosure AC Connections



**Danger**  
Live wires

Incoming  
110 VAC

Incoming  
Neutral

110 VAC after fuse &  
green power button.

**IMPORTANT**  
Use caution inside the en-  
closure while power is on.  
Live wires are present.

These photos  
**DO NOT APPLY TO**  
RazorOptimals  
And  
Auto Pusher Systems.

AC Fuse


110 VAC  
after fuse.  
Goes to  
green power  
button.

110 VAC to DC  
Power Supply

Neutral to  
MDrive  
(blue)

110 VAC  
to MDrive  
(brown)

Neutral to DC  
Power Supply  
(white)

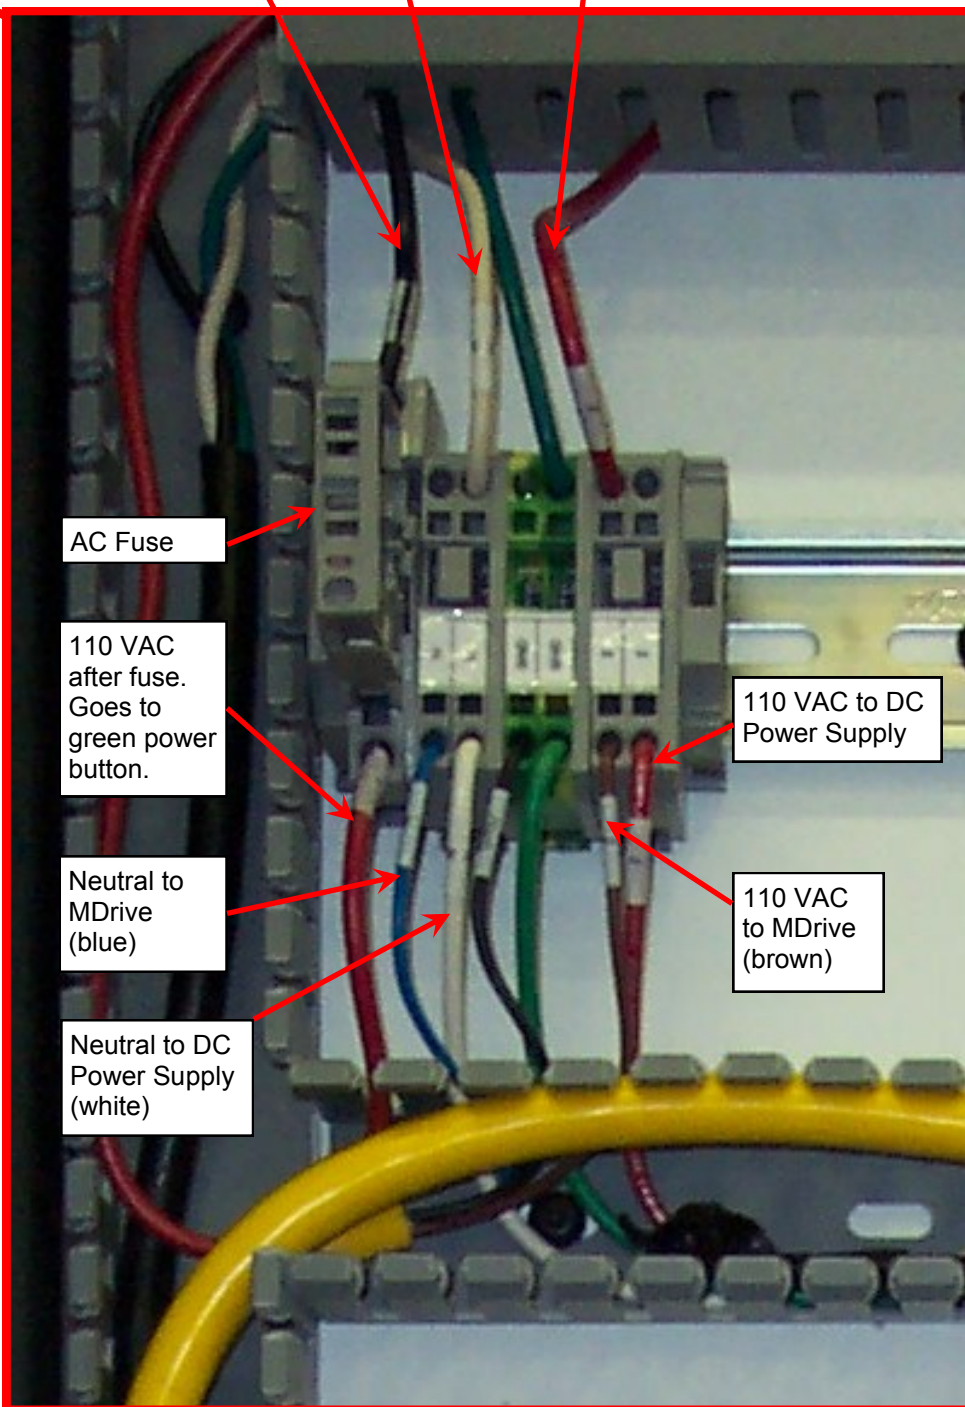




# Tablet Enclosure



**Danger**  
Live wires

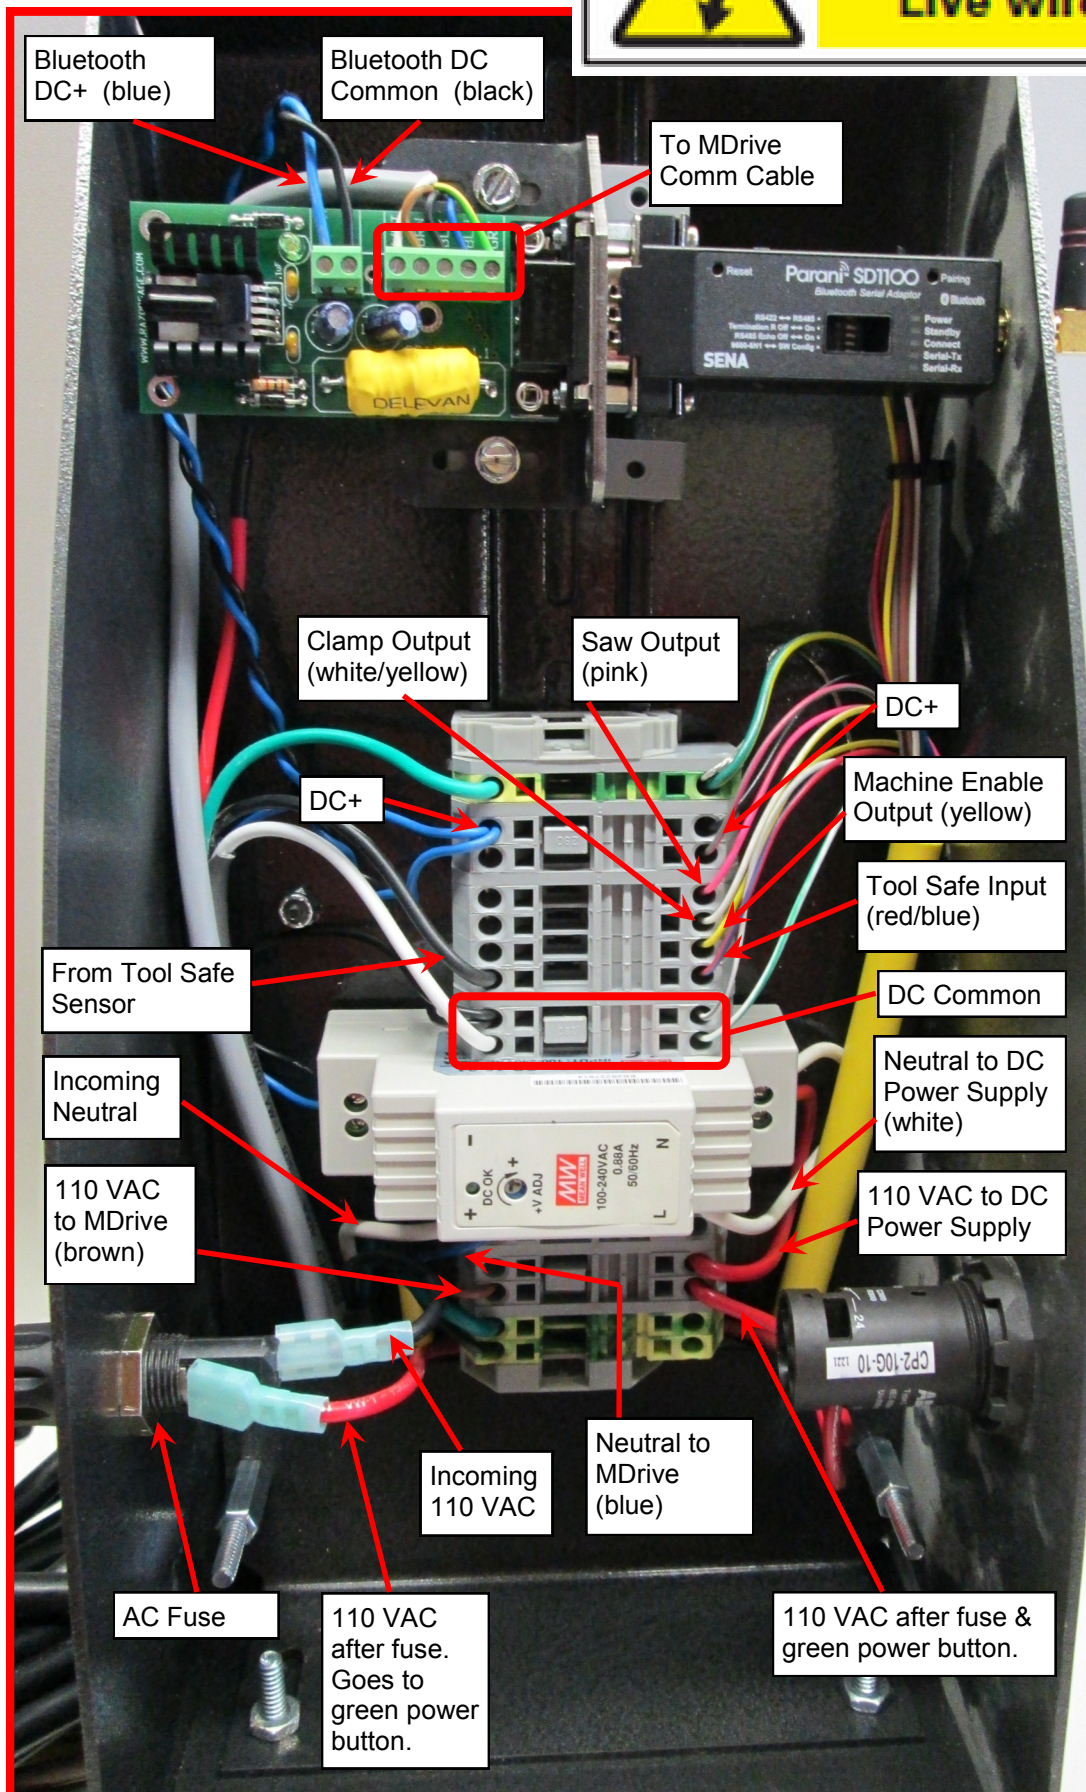

## MDrive Power Cable

Un-screw the power cable from the motor that drives the positioner (MDrive) and use a meter to test for 110 VAC as shown below.

