


Adjust Linear Encoder Reader Head Gap

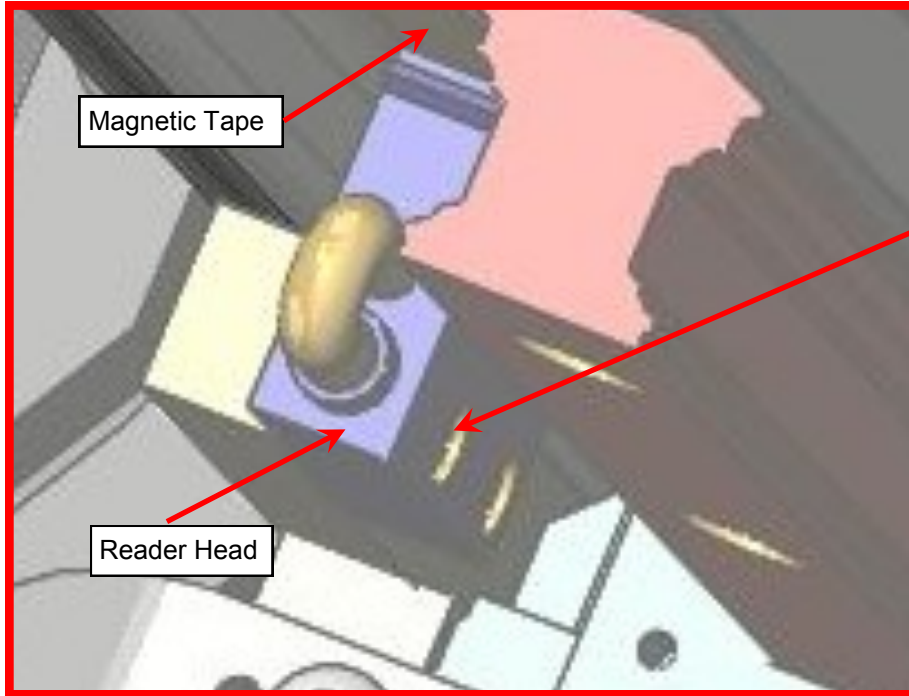

Use 2.5mm L-shaped allen wrench with short arm of the 'L' ground down to access the two screws that mount the linear encoder reader head. Slip a strip of notebook paper between the reader head and the mag tape, hold the reader head against the paper, tighten the screws, and remove the paper.

