

With the positioner at the home position, slide the stop extension to a point about an inch from the saw blade cutting plane and tighten the locking screw.

Now square up the end of a nice straight piece of stock, slide the squared end against the face of the RazorGage stop extension, and make a cut. You should have a piece about an inch long. Measure that piece with calipers or take a close measurement with a tape measure and write down the measurement.



From the MAIN SCREEN on the tablet display, click SETUP SCREEN -


After clicking SETUP SCREEN you will be prompted for a password.

The password is 5239.

\$ ■ 1:37 RazorGage for Android v2.0.0 Connected to LX RazorGage-79B2 Serial Number 201600012 Driver=102.2°F Processor=113.0°F							
Current Position 25.000		Target Position Incl		hes imeters	Main Screen	Cutlist Pre Screen Sto	set Setup ps Screen
7	8	9	1/16 0.0625	1/8 0.125	3/16 0.1875	1/4 0.25	
4	5	6	5/16 0.3125	3/8 0.375	7/16 0.4375	1/2 0.5	GO
1	2	3	9/16 0.5625	5/8 0.625	11/16 0.6875	3/4 0.75	
	0	С	13/16 0.8125	7/8 0.875	15/16 0.9375	UNLOAD	
٥		0					

Now record the measurement you took from the part we cut earlier and enter it in the HOME OFFSET box by pressing this button.

Once you've entered and saved the value, click MAIN SCREEN. Punch in a number and press GO to make the RazorGage xT move to a position. Now slide some stock against the stop and cut a part. Measure the part. The length should match the CURRENT POSITION shown on the screen.

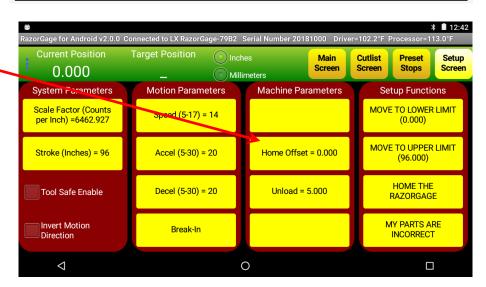

For more information visit our website, www.razorgage.com, scroll to the bottom of the home page and click on the YouTube button to see videos or click the DOWNLOADS tab for PDF files. For instructions on changing the hand of the RazorGage xT go to the DOWNLOADS page of the RazorGage website and download the PDF entitled: "xT-Eco Change Which Side of Saw Positioner Addresses"